


## Figure SC-4 Storm Drain Inlet Protection

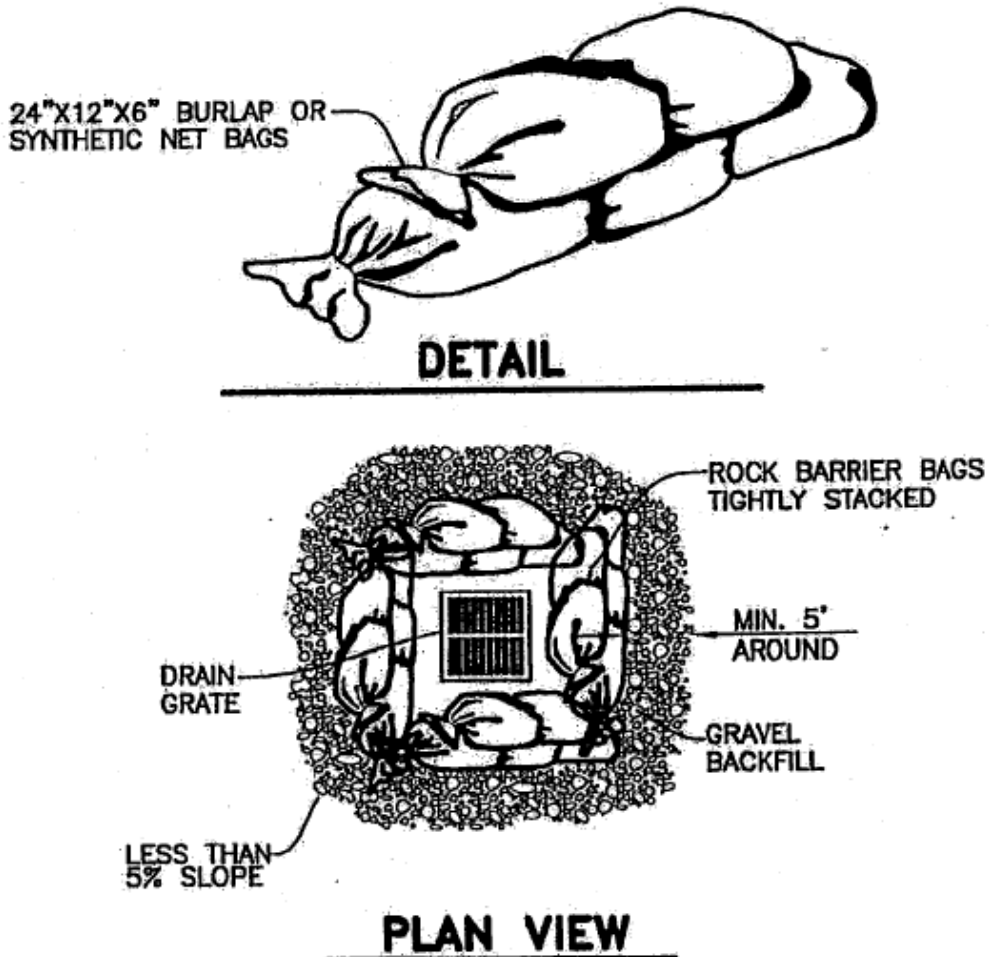

### NOTES:

1. FILL ROCK BARRIER BAGS  $\frac{2}{3}$  FULL OF  $\frac{3}{4}$ " ROCK.
2. PLACE BAGS SUCH THAT NO GAPS ARE EVIDENT IN A SINGLE OR DOUBLE LAYER. STAMP ENTIRE LAYER INTO PLACE PRIOR TO STARTING THE NEXT LAYER.
3. ROCK BARRIER BAGS FOR CATCH BASIN SEDIMENT BARRIERS ARE TO BE USED FOR SMALL, NEARLY LEVEL DRAINAGE AREAS. (LESS THAN 5%).